



2005 – 2009 Mustang

Locate the Powertrain Control Module (PCM) part number

The PCM Part No. is located on the back edge of the PCM.(Fig 1) To Access it the PCM must be removed from its bracket. To do so follow the following procedure:

The PCM is located on the left side of the engine

1. Disconnect the Battery ground cable
2. Remove the three electrical connectors located on the front of the PCM by pulling the gray lock-levers forward then pulling the connector off of the PCM (Fig 2)
3. Remove the two 10mm mounting screws from the PCM Flange above and below the Connectors (Fig 3)
 - ❖ To install, tighten to 8Nm (71 lb-in)
4. Pull the PCM out of the bracket clip. (You will need to apply some force) Move the PCM forward and upward at an angle sufficient to clear obstructions (Fig 4)
5. To install, reverse the removal procedure



Fig 1: Part No. Located above the Bar Code
(____-12A650-____)

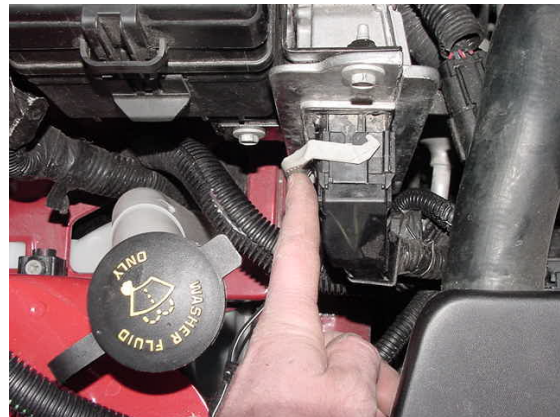


Fig 2: Pull Gray levers forward & remove connectors

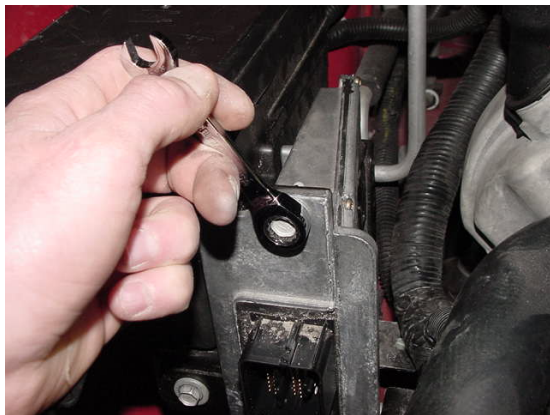


Fig 3: Screws located above & below the connector block

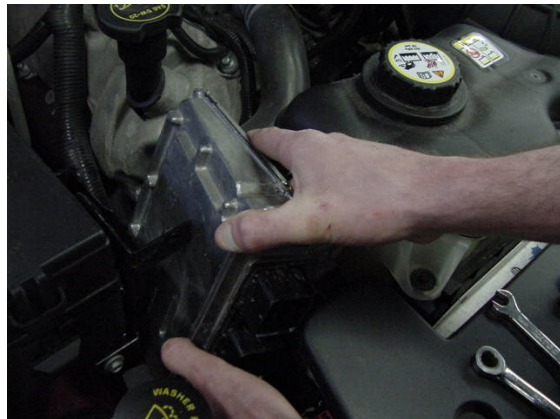


Fig 4: Remove by moving forward and upward