

SPECIAL ATTENTION REQUIRED: Some vehicles require special attention prior to installation of the DASH-CAP™:

301/302/303/303D/311/1101

Remove defroster pan (Phillips Screw Driver)

308 - Reduce width of glove box door approx. 1/8", sandpaper or file.


406 - Remove defroster pan (flexible screwdriver)

708/709/705 - Remove climate sensor

1003 - Remove radio speaker grill (pry with straight edge screwdriver).


Most Mercedes - Remove climate sensor air inlet sleeve by prying up with a sharp screwdriver, and there are more - please call us if you need advice

4. HIGH SPOTS: Trim raised areas (if any) on the original dash with a utility knife as needed in order for the DASH-CAP to fit as close as possible on the original dash. Be careful to trim only those areas which will be covered by the DASH-CAP. Test fit again.

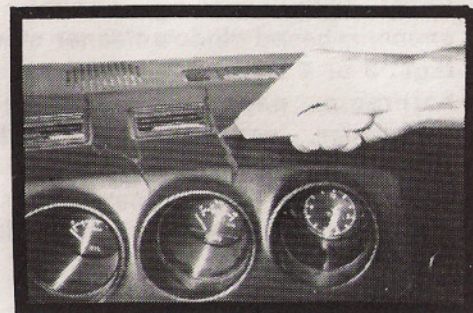

5. SURFACE PREP.: Clean the dashboard and the underside of the DASH-CAP with alcohol or ammonia type window cleaner along the outside edges and around the vents. All waxes and oils must be removed from both surfaces in order to achieve adhesion. Rough up both surfaces (at adhesive area only) with sandpaper.

6. APPLY ADHESIVE: Apply the adhesive to the underside of the DASH-CAP around the perimeters of air vents, and the entire outer edge only. The adhesive "bead" should be about the size of a pencil and approximately 1/2" away from any edge. **IMPORTANT: APPLY SILICONE ONLY NEAR OUTER EDGES AND AROUND VENTS. APPLICATION OF ADHESIVE IN ANY OTHER LOCATION CAN CAUSE CRACKING AND/OR WARPING AND WILL VOID THE WARRANTY.**

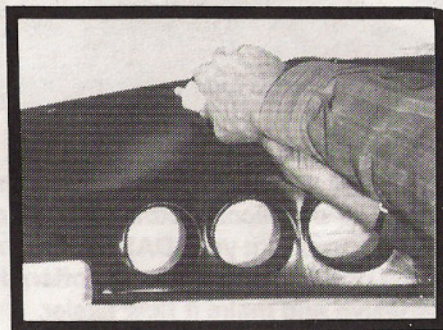

NOTE: In most states the vehicle serial (VIN) numbers must be visible and you will usually find an opening for this in the DASH-CAP, but on certain vehicles the location varies and you need to cut an opening in the cap using a sharp utility knife. Be careful.


SPECIAL NOTE: It is essential that your DASH-CAP be installed while the vehicle is shaded from direct sunlight and in moderate air temperature. A clean and well vented work area is recommended. Please read and observe application and caution labels on cleaning and adhesive products used to install your DASH-CAP

7. INSTALL THE DASH-CAP: Place the DASH-CAP over the original dash. Push carefully and evenly in order to seat the DASH-CAP and spread the adhesive evenly, near the edges only.

8. REPLACE ANY ACCESSORIES: Replace any previously removed pans, grills or accessories.

9. WIPE AWAY ANY EXCESS ADHESIVE WITH A DAMP CLOTH.

10. SECURE IN POSITION: Use rolls of paper, cardboard wedges, elastic cords and weights to hold the DASH-CAP firmly in position as needed for at least 4 hours to allow the adhesive to set and cure.

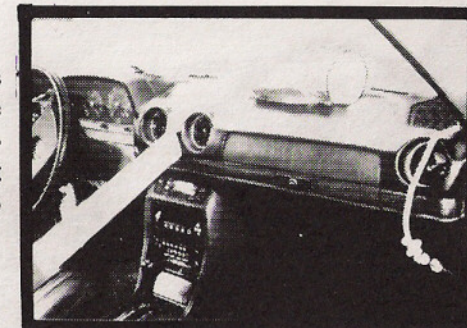

11. UNCLAMP AND CLEAN: When adhesive is cured remove clamping items and peel away any excess adhesive which may be showing.

12. MAINTENANCE: Mild car care products such as window cleaner or soap and water can be used to clean your DASH-CAP (if necessary).

13. CONCLUSION: DASH-CAPS are easy to install, but special problems can and do arise. Should you need help don't hesitate to contact your local dealer or call the manufacturer listed below. Thank you for using DASH-CAP™.

OTHER ACCU-FORM PRODUCTS

Replacement door panels for:

73-86 Ford F Series P.U.

78-86 Bronco

73-87 Chev. & GMC

Interior Panels:

70-74 Barracuda & Challenger

68-85 Fiat Spider 124 & 2000

Door Panel Covers for:

83-89 Lincoln Town Car

Arm Rest Covers for:

73-84 Ford Trucks & Broncos

73-87 Chevy & GMC Trucks

Buick, Oldsmobile, Cadillac, Volvo 1800

Console Covers for:

Chevy Camero, Datsun/Nissan, Pontiac

Firebird, Ford Cougar, Fiat Spider

ACCU-FORM PLASTICS • 460 N. 2460 W.
Hurricane, Utah 84737 • 435-635-9273