TYPICAL APPLICATIONS

BEFORE

This dash is a disaster. Who would want to buy a car that looked like this?

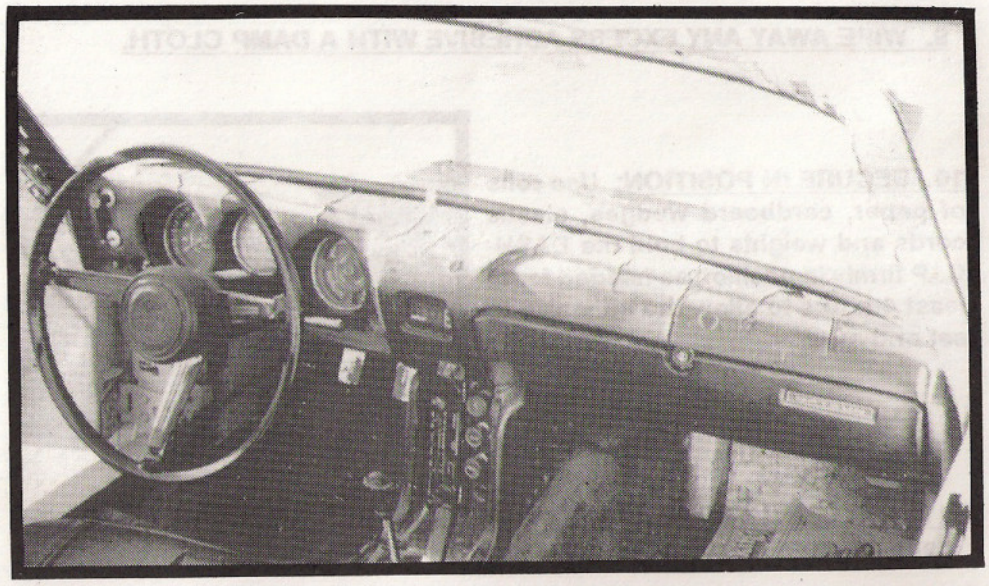

AFTER

What a difference! There's more work to do, but the new DASH-CAP is a huge step in the right direction.

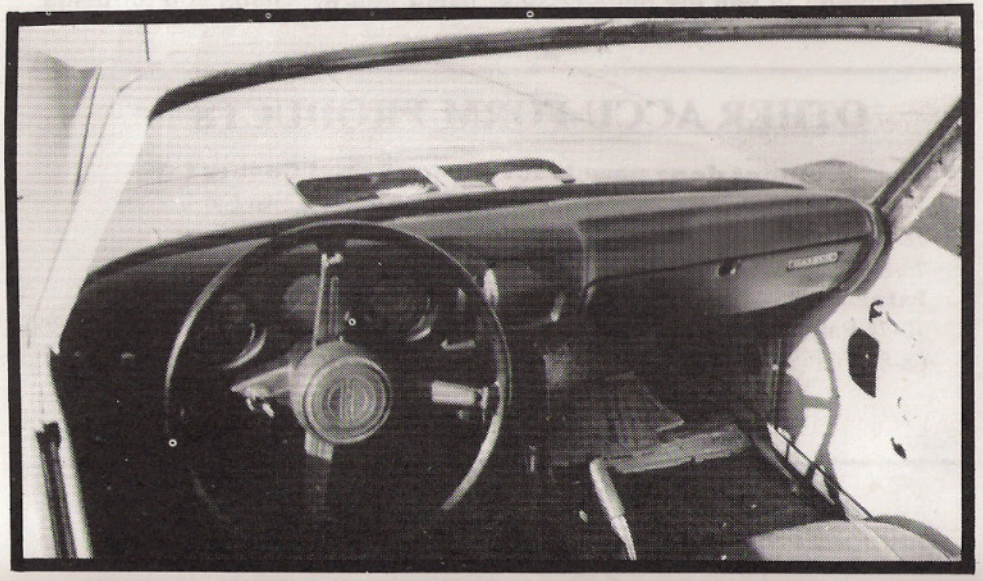

DASH-CAP™ INSTALLATION INSTRUCTIONS

Congratulations! You have just purchased a unique product which if properly installed and cared for will look great for many years.

Please read and follow the Installation Instructions very carefully, especially #6 about where to apply the silicone.

And one other quick caution: Everything expands when heated, including our special plastic, so it's a good idea to park your vehicle so the sun doesn't roast your DASH-CAP™, your steering wheel or you.

We're sure you'll enjoy your new DASH-CAP™, and we hope you'll tell your friends. Thanks for using ACCU-FORM.

1. TOOLS AND MATERIALS REQUIRED:

Utility knife, rubbing alcohol or ammonia based window cleaner, clean rags, 3 or 4 rolls of paper towels or bathroom paper, medium grit sandpaper, cardboard strips for wedges, screw drivers, duct tape or masking tape, wads of newspaper. Elastic type "Bunji-Cords" may also be useful.

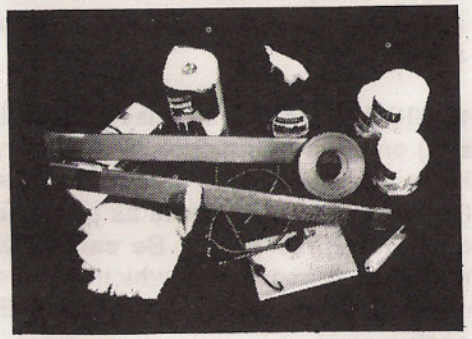

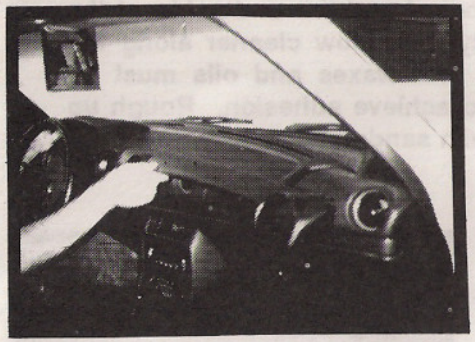

2. PRE-FIT THE DASH-CAP: Now is the time to try your new DASH-CAP on the vehicle to make sure you have the correct model. Push it firmly into place. Does it fit properly? Does the glove box open OK?

3. WARM UP THE ADHESIVE: Place the tube of silicone adhesive (which was packed with your DASH-CAP) in a glass of hot water. This will soften the adhesive and make it flow easier.